


TYPICAL SLOPE SOIL STABILIZATION

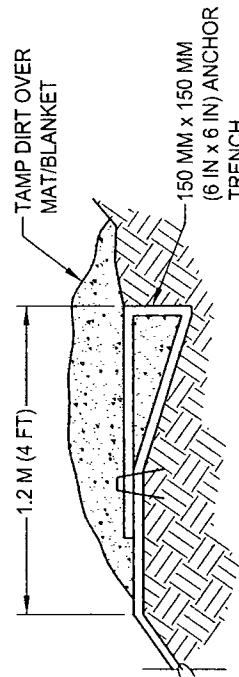

WET SLOPE LINING

NOTES:

1. SLOPE SURFACE SHALL BE FREE OF ROCKS, CLODS, STICKS AND GRASS. MATS/BLANKETS SHALL HAVE GOOD SOIL CONTACT.
2. LAY BLANKETS LOOSELY AND STAKE OR STAPLE TO MAINTAIN DIRECT CONTACT WITH THE SOIL. DO NOT STRETCH.
3. INSTALL PER MANUFACTURER'S RECOMMENDATIONS.

ANCHOR DETAIL

DATE:	01/18/2007	NOT TO SCALE
REVISION	BY	APPROVED
		DATE

CITY OF ELK GROVE - PUBLIC WORKS

EROSION CONTROL BLANKETS/MATS SLOPE INSTALLATION

APPROVED BY:
CITY ENGINEER

DRAWING NUMBER
SQ - 9B

